

**Sterile air box used in process production environments.**

In the processing of perishable or sensitive product, the demands for hygiene are usually very high. Ambient air is polluted and can ruin even the cleanest production process if it comes into contact with the end product without being purified. Bacteria, oil mist, water and dust in ambient air are the main reasons for spoilage of products. Sterile air creates aseptic conditions in pressurized and open storage or mixing tanks and in filling machines. A continuous exchange of the air cushion and a slight overpressure in this critical area reduces the risk of contamination with unfiltered ambient air.

For production processes where bacteria and particle-free air is required, Donaldson® developed the P-SLF sterile air Box. With eight box sizes from 18 to 529 cfm, sterile air can be produced in the most cost-efficient way. The P-SLF box is available in mobile and stationary versions and can be sanitized with saturated steam. The P-SLF box is food and beverage, chemical, pharmaceutical, cosmetic applications and other industries.

The filtration system is a compact unit consisting of a pre-filter and sterile filter with a low pressure blower. With a very low overpressure, the sterile air is transported into the storage tank. This constant air exchange prevents contamination by bacteria and particles found in ambient air.




**P-SLF**

**HOW IT WORKS**

The blower draws ambient air ① into the filtration chamber ②. The air is cleaned with a prefilter on the upstream side of the blower. The retained particles will cause an increase in differential pressure over time. To protect the blower ④, a vacuum relief valve ③ is installed. The blower compresses ④ the air to about 1.5 psi. The compressed air is fed into the sterile chamber ⑤ where a sterile filter retains bacteria and other contaminants. To protect the blower, a pressure relief valve will open if the sterile filter is blocked. At the outlet ⑪ the sterile air is fed to the tank or other point of use.

During sterilization of the upper chamber and filter elements, the disc valve ⑦ needs to be closed to prevent steam from entering the blower. To maintain good steam quality, a steam filter ⑧ is standard on the P-SLF box. After sterilization the condensate can be drained out the discharge valve ⑨⑩.

See also sterilization instructions.

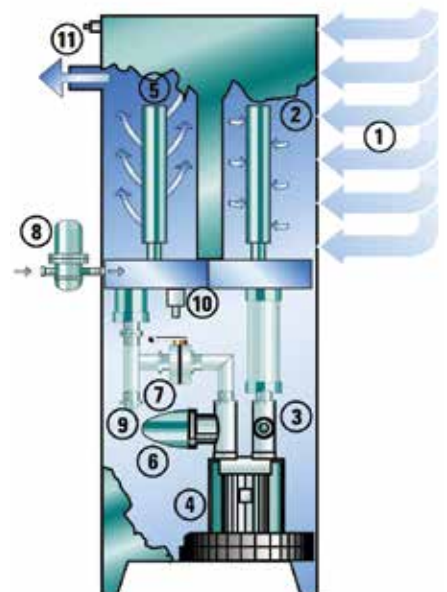

## SPECIFICATIONS

Type P-SLF	Flow Rate (cfm)		Dimensions (inches)			Filter Elements	
	Differential Pressure = 1.5 psid	Differential Pressure = 3 psid	Height	Width	Depth	Size	Type
0288-0	42	18**	64	29	19	2x20/30 2x20/30 1x05/20	FF BE P-GS
0432-0	84	36	64	29	19	3x20/30 3x20/30 1x05/20	FF BE P-GS
0576-0	126	74	72	29	19	3x30/30 3x30/30 1x05/25	FF BE P-GS
0768-0	160	128	80	39	23	4x20/30 4x20/30 1x05/25	FF BE P-GS
1152-0	240	160	80	39	27	6x30/30 6x30/30 1x05/25	FF BE P-GS
1536-0	260	220	80	47	27	8x30/30 8x30/30 1x07/30	FF BE P-GS
2304-0	400	300	90	47	27	12x30/30 12x30/30 1x07/30	FF BE P-GS
3072-0	600	500	97	47	27	16x30/30 16x30/30 1x10/30	FF BE P-GS

\*\* Maximum 2.5 psi total blower difference.

- P-SLF Sterile Air Systems are integrated units, complete with prefilter FF G2", sterile filter BE G2" and a steam filter P-GS combined with a blower for low pressure applications. The P-SLF processes ambient air to sterile air.
- The sterile air system is also available in a 60 psig version. In this case the sterile filter can be sterilized with saturated steam up to 60 psig.
- Standard Power Supply: 110 V/60 Hz; (P-SLF 0228-0 – 1152-0)  
440 V/60 Hz; (P-SLF 1536-0 – 3072-0)
- Other electrical connections available.

### Important Notice

Many factors beyond the control of Donaldson can affect the use and performance of Donaldson products in a particular application, including the conditions under which the product is used. Since these factors are uniquely within the user's knowledge and control, it is essential the user evaluate the products to determine whether the product is fit for the particular purpose and suitable for the user's application. All products, specifications, availability and data are subject to change without notice, and may vary by region or country.



Donaldson Company, Inc.  
Process Filtration  
PO Box 1299  
Minneapolis, MN  
55440-1299 U.S.A.

Tel 800-543-3634 (USA)  
Tel 800-343-3639 (within Mexico)  
Fax 952-885-4791  
processfilters@donaldson.com  
donaldsonprocessfilters.com



### F117027 (04/17) ENG P-SLF Box Sterile Air Ventilation System

© 2015 Donaldson Co., Inc. All Rights Reserved. Donaldson and the color blue are marks of Donaldson Company, Inc.  
All other marks belong to their respective owners.  
{Contains Donaldson proprietary technology.}